



Steamfast™

MODEL: i3



TRAVEL STEAM IRON
OWNER'S AGUIDE

READ ALL INSTRUCTIONS BEFORE USING IMPORTANT SAFETY INSTRUCTIONS

This owner's guide and any additional inserts are considered part of the product. They contain important information about safety, use, and disposal. Before using the product, please familiarize yourself with all operating and safety instructions. Please keep all documents for future reference and pass these documents on, together with the product, to any future owner. See steamfast.com to view, download, and print the most current version of this owner's guide.

When using an iron, basic precautions should always be followed, including:

INTENDED USE: Use appliance only for its intended use. This product is intended to be used indoors for steam ironing in the United States. This product is not intended for commercial or industrial use. The manufacturer assumes no responsibility for damage or injury due to unauthorized use or product modification. Failure to follow these directions will void the product warranty. This mini travel iron is not intended for regular use.

**WARNING: Risk to Children and Impaired Persons**

Supervision is required during the installation, operation, cleaning and maintenance of this product by children 12 years of age and younger and anyone with reduced physical, sensory or mental capabilities. Children should be supervised to ensure that they do not play with the appliance, its parts and packaging material.

- Close supervision is required for any appliance used by or near children and pets. Do not leave the iron unattended while the iron is connected or on an ironing board.

**WARNING: BURN HAZARD - To reduce the risk of burns or injury to persons, observe the following:**

- Use caution when handling this steam unit. Burns could occur from touching hot metal parts, hot water, or steam. Use caution to avoid contact with hot water when turning the product upside down to empty the reservoir.
- Avoid contact with the hot metal ironing plate.
- Do not point steam vents at people or pets as serious injury or damage can occur.
- Do not iron or steam articles while wearing. Remove article before using this appliance.
- To reduce the risk of contact with hot water emitting from steam vents, check appliance before each use by holding it away from body and operating steam button. Do not operate unit if steam vents are blocked.



WARNING - To avoid damage to the unit or power cord, and to reduce risk of fire, electrical shock and injury to persons, observe the following:

- Do not use the iron if it has been dropped, if there are visible signs of damage, or if it is leaking. Shock, fire, or injury may occur.
- Do not let the cord touch hot surfaces. Let the iron cool completely before putting the iron away. Do not wrap cord around the unit, use the cable tie provided for storage.
- Do not use power cord as handle, allow it to hang over edge of counters, or be crimped or closed in doors.
- The iron must not be left unattended while it is plugged into any power outlet.
- Always turn the iron OFF before plugging or unplugging the iron from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.
- A loose fit between wall outlet (receptacle) and plug may cause overheating and distortion of the plug. Discontinue use of the product in this outlet. Contact a qualified electrician to replace loose or worn outlets.
- To reduce likelihood of circuit overload, do not operate another high wattage appliance on this same circuit.
- If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock

due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or tripped over.

- This appliance has a polarized plug (one blade is wider than the other.) To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- To avoid the risk of electric shock, do not immerse the iron in water or other liquids.
- Always disconnect the iron from the electrical outlet before filling the iron with water, emptying the water from the iron, and when the iron is not in use. Do not open water tank cap during use.
- Only use distilled water to fill unit. Do not use cleaning agents or other substances to fill unit. Cleaning agents and other substances could result in injury or damage to the unit.
- The iron must be used and rested on a flat stable surface. The iron must only be used with the stand or base provided. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- Always allow unit to cool completely (at least 30 minutes) before storing. Place unit on stand or base when cooling, to avoid heat damage to surfaces.



SERVICING WARNING—To reduce risk of fire, electrical shock and injury to persons, observe the following:

- Do not operate the iron with a damaged cord, or if the appliance has been dropped or damaged. To reduce the risk of electric shock, do not disassemble or attempt to repair the appliance, take it to a qualified service person for examination and repair. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used.
- If Power Light does not illuminate when unit is turned ON, unit is not operating normally. Immediately unplug and have unit serviced by qualified service personnel.
- If Heating Indicator Light does not illuminate when Temperature Control Dial is turned to a selected heat setting, unit is not operating normally. Immediately unplug and have unit serviced by qualified service personnel.
- Clean your product regularly, only as is instructed in this manual. Prior to cleaning, turn off the power on your product and unplug. Do not use gasoline, thinners, solvents, ammonias or other chemicals for cleaning. Refer to the cleaning instructions provided.

SAVE THESE INSTRUCTIONS

PRODUCT INFORMATION

- 1 IRONING PLATE**
The heated, non-stick surface that is used to press fabrics, remove wrinkles and create creases.
- 2 MAIN BODY**
Contains the units' internal heating components.
- 3 HEATING INDICATOR LIGHT**
Illuminates when the Temperature Control Dial is set to one of the three heat settings.
- 4 WATER TANK CAP**
Covers the Water Tank fill hole. The Water Tank Cap is tethered to the unit, and cannot be completely removed.
- 5 WATER TANK WINDOWS (2)**
Monitor the level of water in the Water Tank. The unit must be sitting upright to correctly read the water level.
- 6 STEAM BUTTON**
Press to activate the unit's steam function. Locking the Steam Button down disables steam; pressing the Steam Button releases it into the unlocked position, enabling steam.
- 7 TEMPERATURE CONTROL DIAL**
Turn to select one the three heat settings, and to turn heating off.
- 8 HAND GRIP**
Ergonomically designed for user comfort. The Hand Grip contains the unit's Water Tank.
- 9 WATER TANK (INTERNAL)**
Located inside the Hand Grip and designed to hold a maximum of 1.1 oz (32 ml.) water.

10 STANDS

 
Two supports located at the rear of the Main Body. The Stands are designed to support the unit in an upright position when the Ironing Plate is hot, to help prevent damage to surfaces.

11 MEASURING CUP

Designed to help you easily and consistently fill the Water Tank with the optimum amount of water.

12 TRAVEL BAG

For easy storage.

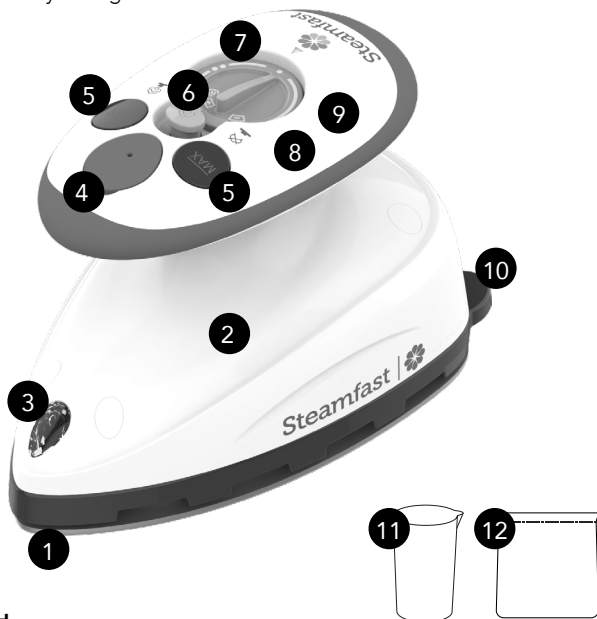

FILLING WATER TANK (FOR STEAM IRONING)

1. Turn off and unplug unit.
2. Place unit (Ironing Plate down) on a flat, heat-resistant surface.
3. Fill Measuring Cup with water up to (1.1 oz. / 32 ml.).

NOTE: In order to extend the life of your unit and keep it functioning at its maximum potential, it is highly recommended that distilled or de-mineralized water be used in Water Tank.

Using tap water could result in mineral buildup which could block the steam vents. This will reduce the effectiveness of this unit and may cause unit to spit or spurt hot water. Follow cleaning instructions provided.

4. Open Water Tank Cap. Pour water from Measuring Cup into Water Tan. Close Water Tank Cap.

While steam-ironing, the Water Tank Windows let you monitor the water level in the Water Tank. When the water level becomes low:

1. Turn off and unplug unit. Allow to cool for at least 5 minutes.
2. Follow STEPS 1-3 above.
3. Plug power cord back in and resume ironing as usual.



OPERATING UNIT

DRY IRONING

IMPORTANT: Make sure Steam Button is locked in lowered position (FIGURE 4-B) before dry ironing. This will prevent any water from accidentally dripping.

1. Plug power cord into a convenient electrical outlet.
2. Turn Temperature Control Dial clockwise so that small arrow (▲) on Hand Grip (FIGURE 3-A) points to one of three heat settings on Dial (FIGURE 3-B). Heating Indicator Light will illuminate.

NOTE: It is recommended to start with lower temperatures

first, as high settings designed for heavy materials can damage delicate fabrics.

3. When Heating Indicator Light turns off, Ironing Plate is heated and ready for use.

NOTE: During use, Heating Indicator Light will cycle on and off as unit works to maintain a constant temperature. You may continue to iron while Light cycles.

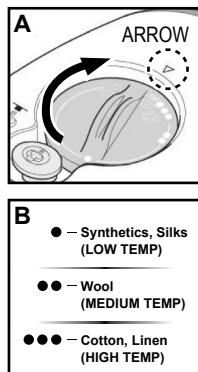 



FIGURE 3

STEAM IRONING

1. Plug power cord into a convenient electrical outlet.
2. Turn Temperature Control Dial clockwise as far as possible to set unit to high temperature (MAX ●●●). Heating Indicator Light will illuminate.
3. When Heating Indicator Light turns off, press Steam Button. Button will lock into raised position (FIGURE 4-A), and unit will begin emitting steam from steam vents on Ironing Plate.

NOTE: Unit is designed to steam horizontally. Steam flow will stop whenever unit is in vertical upright position. If unit is leaking excessively in vertical position, check that steam button is disengaged.

 **CAUTION: Burn Hazard.** Hot steam may temporarily vent when the unit is positioned vertically.

4. To stop steam flow during use, press Steam Button again to lock it into the lowered position. This will prevent dripping in the upright position (FIGURE 4-B).

Once all ironing tasks are finished, immediately turn Temperature Control Dial counter-clockwise until it is set to off (O) position. Be sure that Steam Button is locked in lowered position - this will prevent water from accidentally dripping during next use. Prop unit upright on Stands to cool, and refer to CARE & STORAGE for proper cleaning and storage.

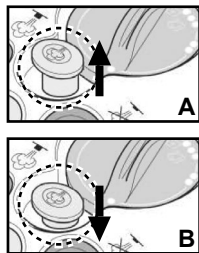 


FIGURE 4

STORAGE & CARE

CLEANING & STORAGE

1. Turn Temperature Control Dial to "off" (O) position. Unplug power cord.
2. Prop unit upright on Stands and allow Ironing Plate to cool for 30 minutes.
3. Open Water Tank Cap and drain any remaining water into a sink or tub. Close Cap when finished.
4. Wipe Main Body and Ironing Plate with a soft cloth lightly moistened with water.

- **DO NOT clean Ironing Plate with detergents or descalers.**
- **DO NOT clean Ironing Plate with abrasive or corrosive products.**
- **DO NOT submerge unit or hold unit under running water.**

5. Bundle cord with supplied cable tie when storing. **DO NOT** wrap cord around the product.
6. Place unit and Measuring Cup inside Travel bag and store in a cool, dry location.

MINERAL BUILD-UP

1. Follow STEPS 1-3 under CLEANING & STORAGE section above; however, leave Water Tank Cap open.
2. Make a mixture of 0.5 oz. distilled water and 0.5 oz. vinegar.
3. Using included Measuring Cup, pour water-vinegar solution into Water Tank. Close Water Tank Cap.
4. Follow normal steam ironing procedure, as outlined on Page 8. Allow unit to steam out full contents of Water Tank. When finished, lock Steam Button in lowered position and unplug unit.
5. Allow to cool for 5 minutes, then refill Water Tank with fresh distilled water. Repeat STEP 4 until vinegar odor dissipates.
6. Store unit as normal.



CAUTION: Burn Hazard. Using tap water could result in mineral buildup which could block the steam outlets, causing this unit to spit or spurt hot water. Follow cleaning instructions provided.

WARRANTY

Steamfast, a division of Vornado Air, LLC. Steamfast warrants to the original consumer or purchaser this Steamfast ("Product") is free from defects in material or workmanship for a period of two (2) years from the date of acquisition. If any such defect is discovered within the warranty period, Vornado, at its discretion, will repair or replace the Product at no cost.

For warranty service: Call 1-800-711-6617 or email consumerservice@steamfast.com to obtain a Return Authorization ("RA"). Please have or include your Product's model number and serial number, as well as your name, address, city, state, Zip code, email, and phone number when contacting Vornado for warranty service. To file a contactless warranty claim, visit www.steamfast.com/contact

 
After receiving the RA, ship your Product to: Vornado Air LLC Attn: Warranty & Repair 415 East 13th Street, Andover, KS 67002. For your convenience, please have your model number and serial number when contacting Vornado with service inquiries. To ensure proper handling, packages must be clearly marked with the RA number. Packages not clearly marked with the RA number may be refused at the receiving dock. Please allow 2-3 weeks for warranty service and return of your Product after the Product is received.

This warranty does not apply to defects resulting from abuse of the Product, modification, alteration, mishandling, improper maintenance, commercial use or repair or service of the Product by anyone other than Vornado; damages which occur in shipment or are attributed to acts of God. Improper product use, which includes using an external device that alters or converts the voltage or frequency of electricity, or shipping a Vornado product to a country not intended for use will void all warranties. Any unauthorized product modification, repair by unauthorized repair center or use of non-approved replacement parts is not recommended and any consequences will not be covered by support services or product warranties.

The product warranty will be honored only on models that are being used in the country intended. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VORNADO SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state. The manufacturer assumes no responsibility for damage or injury caused by failure to follow these instructions, improper product use or unauthorized product modifications. Any such actions will invalidate the product warranty.

All company names and product names are trademarks of their respective owners. ©All rights reserved. All technical information, data and instructions for the installation, connection and operation contained in these instructions for use correspond to the latest available information at time of printing. The contents of this manual may differ slightly from the actual product. Observe any additional supplements.

© 2024 Vornado Air, LLC. Andover, KS 67002, U.S. Specifications subject to change without notice. Steamfast® is a trademark owned by Vornado Air, LLC. Manufactured in China.

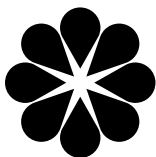

SteamfastTM

1-800-711-6617 | steamfast.com | consumerservice@steamfast.com